




INSTALLATION INSTRUCTIONS FOR THE MANUAL CALL POINT MODELS MCP1....,MCP2....,MCP3....,MCP4....

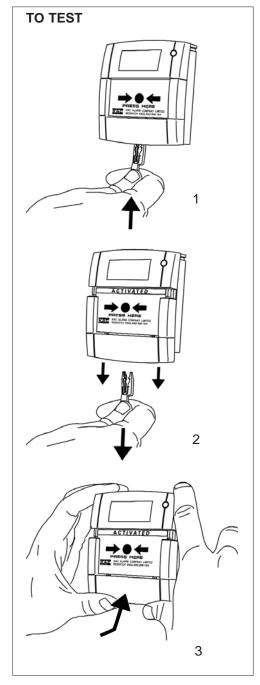


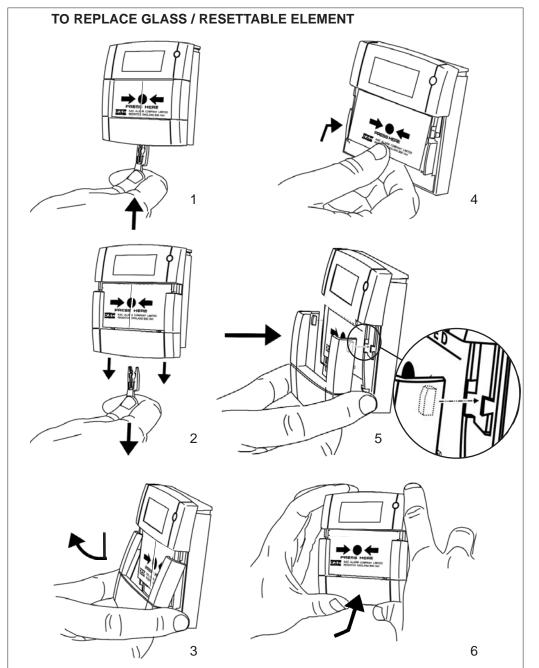


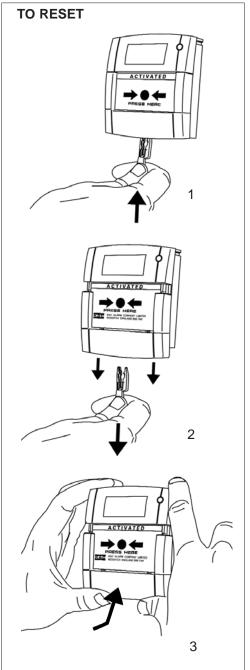



INSTALLATION INSTRUCTIONS FOR THE MANUAL CALL POINT MODELS MCP1....,MCP2....,MCP3....,MCP4....

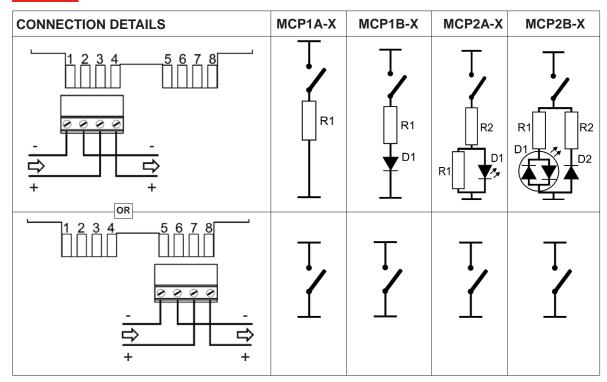

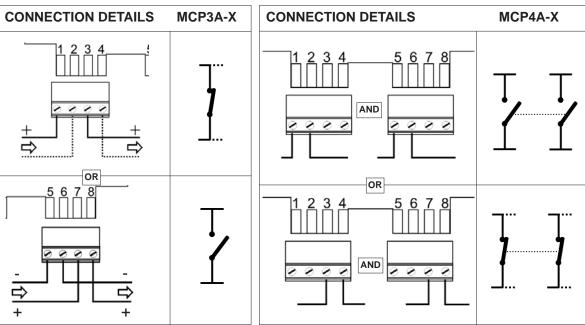

X in the MCP code (left) represents the final digits of the part number, which indicate MCP colour, component values, mounting options and element type.

eg MCP1A -R470SF = (MCP1A, Red, 470R, Surface, Flexible Element).

